

Software instructions

Software Instructions:



Software interface:

Profile1	Profile2	Profile3	Macro			¥ f - ×
	T TOMOL					lickle
🔲 Light						
USB Report Rate 125Hz S00Hz	250Hz 1000Hz	Tab Q W Tab Q W Cuys A S Shin Z X Crin II Ar				Ann A an
Bad	tore					
Restore	Default			ок	Cancel	Apply

Light setting:



USB Report Rate setting:

√ 125Hz	250Hz
500Hz	1000Hz



Button function:

Click "Backups" to save the current configuration as a new profile. Click "Restore" to use the specific configuration you set before. Click "Restore Default" to restore all settings to default values.

Backups	
Restore	
Restore Default	

Click "Apply" to save and implement all current settings.

ОК	Cancel	Apply

Macro:

- 1. Click "Macro" to enter the Macro setting.
- Click "+" to add "Macro1".
 Click "Macro1" to change the macro name.
- 4. Click "Record", Then Press any key on keyboard you want to be recorded, click "Stop record" when you finish recording.
- 5. If you want to change the settings for the macro, you can double-click on the place you want to modify, or select and click "Delete".
- 6. Click "ok" to save the macro.

Macro setti	ing		Macro settin	9		
Macro Name	▼ 🕂 — 🔲 Re	cord Delay Cycles ¹	Macro Name Mac	cro1 🗸 🕂 — 🔳 Re	ecord Delay Cycles ¹	
Keys	Action	Delay(ms)	Keys	Action	Delay(ms)	
•	m	•	•	m	Þ	
$\overline{} \simeq $						
	Recor	d OK Cancel		Recor	rd OK Cancel	
	(1)			(2)		







(5)

(6)

Button setting

* Note: To setting the button macro, you need to close the Light setting first.



Select the button to start the macro, button displays in red.





Single key setting: Set a single key function to this button.

Macro setting	Single key	Multimedia	<u>ب</u>			
Please input a single key						
		ОК	Cancel			

Restore the default function of buttons.



Multimedia: Set a multimedia function to this button.

Macro	setting	Single key	Multime	Multimedia		
Select a Medi	а					
	Media Plaver		•			
	Media Plaver					
	Play/Pause					
	Stop Play					
	Prev Track					
	Next Track					
	V-					
	Mute					
	WWW Home					
	WWW Refresh					
	WWW Stop			Cance	el	
	WWW Back				-	
	WWW Forward					
	WWW Favorite					
	WWW Search					
	My PC Oplawlater					
	Calculator					
	width	01		Cancel		



Macro setting: Set Macro to this button.

Macro setting	Single key	Multimedia) ଚ				
Macro Name TEST	Record	d Delay Cycles ¹					
Keys	Action	Delay(ms)					
Q	↓	50					
Q	t	50					
E	4	50					
E	†	50					
Ctrl	÷	50					
Alt	÷	0					
•	III		•				
$\overline{} \simeq \overline{} \simeq \overline{}$							
	Record	ОК Са	incel				

Click "ok" to save Button setting, button displays in Blue. The setting result is displayed by putting your mouse on it.



軟件使用說明



軟件界面:



燈光設置:



USB報告率設置:

USB報告率	
√ 125Hz	250Hz
500Hz	1000Hz



按鈕功能:

點擊"備份"將當前配置另存為配置文件。 點擊"還原"使用之前設置好的特定配置。 點擊"恢復默認設置"所有設置恢復為默認值。

備份	
還原	
恢復默認設置	

點擊 "應用"保存并實現當前按鍵的所有設置功能。

確定	取消	應用

巨集編輯:

1.點擊"巨集編輯"進入巨集設置。 2.點擊"+"添加"巨集1"。加号可用连接线连接或者抠图标 3.點擊"巨集1"更改巨集名稱。 4.點擊"錄製",然後按下鍵盤上需要錄製的任何按鍵,點擊"停止錄製"結束錄製。

5.如果需要修改巨集里的設置,可以雙擊要修改的位置,或者選中后點擊"刪除"。 6.點擊"確定"保存巨集設置。

巨集設置			巨集設置			
互集名稱設定 → - ■ 記錄技雑延時 循環次数 1			巨集名稱設定 巨集1	▼ + - ■ 記録	条按鍵延時 循環次數 ¹	
按鍵	動作	延時(毫秒)	按鍵	動作	延時(毫秒)	
•	III	Þ	•		•	
⊼ ⊻ ^ ∨ @ ø	$\overline{} \hspace{0.1cm} \succeq \hspace{0.1cm} \land \hspace{0.1cm} \lor \hspace{0.1cm} \textcircled{1}$					
	錄製	確定取消		练製	確定取消	

(1)

(2)

軟件使用說明







(4)



按鍵設置:

*提醒:設置按鍵巨集前,需要先關閉燈光設置。



選擇要設置巨集的按鍵,按鍵圖示顯示為紅色。





單鍵設置:給按鍵設置一個單鍵功能。

巨集設置	單雜	多媒體	<u>ب</u>
請輸入一個單鍵			
		確定	取消

恢復按鍵默認功能



多媒體:給按鍵設置多媒體功能

			•	
	単雜	多媒	#	
多媒體按鍵				
				0
媒體播放器		•		
媒體播放器				
播放/暫停				
停止播放				
上一曲				4.
下一曲				Tand
音量減				
音量加				
王具				
「「「」」「「」」」				
「伊里」			取消	
10000000000000000000000000000000000000				
山藏夾				
搜索				
我的電腦				
計算器				
郵件				
		確宁	Tho its	



巨集設置:給按鍵設置巨集。

巨集設置	單鍵	多媒體	С С			
巨集名稱設定 TEST	▼ 🕂 — 🔲 記錄打	安建延時 循環次數 <mark>1</mark>				
按鍵	動作	延時(毫秒)				
E	÷	50				
E	t	50				
Q	÷	50				
Q	t	50				
Ctrl	¥	50				
Alt	¥	0				
$\overline{} \simeq 2$						
	练製	確定即	消			

點擊"確認"保存按鍵設置,按鍵圖示顯示藍色,鼠標懸停顯示按鍵設置。

